Installation & Maintenance Instructions

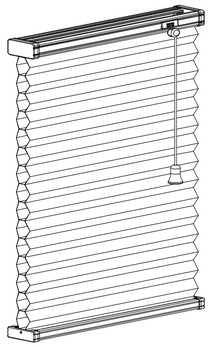

Cellular Shade

Getting Started

Remove the cellular shade from the package. Be sure to keep the packaging until the shade operates to your satisfaction. Please take a moment to review the following installation guide for proper installation.
Note: Prior to installation, please make sure your hands are clean and free from any dirt or oil that could cause damage to the fabric.

Recommended Tools

- Measuring Tape
- Pencil
- Level
- Screwdriver
- Power drill (1/4" hex driver and drill bit)

You will need to use the following fasteners for your particular mounting surfaces:

Mounting Surface	Fastener
Wood	1 1/4" Rounded Head Screw (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided)
Metal	Sheet Metal Screws (Not Provided)

Check Hardware

Check your package for contents needed for proper installation.

Installation Bracket

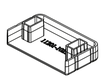
Headrail Endcap

Bottom Rail Endcap

Hold Down Bracket

Cord Cleat

Screws

Step 1. Install Brackets

Before installation, make sure the end caps are retrieved from the hardware box and assembled to the rails.

- Measure 2"~4" from both ends of the headrail. Mark the bracket location on the mounting surface (applies to both inside and outside mount installation) and make sure the bracket is not in obstruction with the cordlock inside the headrail.

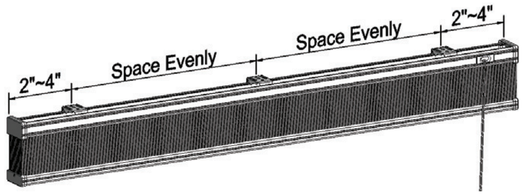

- For easy installation and proper shade operation, use a level to ensure all brackets are in alignment.

Inside Mount

- For shade to operate properly when inside mounted, check to make sure there is enough depth clearance for the installation bracket and no obstructions.
- If you would like your shade to be flush with the wall, the distance from the wall to center of 1st screw hole needs to be ¾".

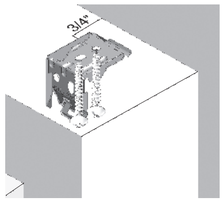

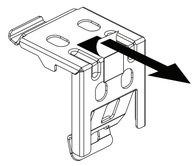

Outside Mount

- The bottom of the installation bracket can be flush with top edge of window opening or higher. Make sure all brackets are at the same level.

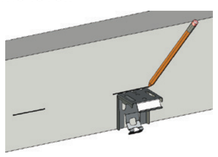

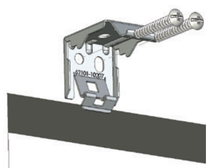

Step 2. Install and Uninstall the Shade

- Position the shade so the front (side with pull cord) is facing you.

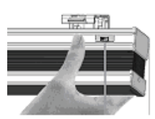

- Step (1): Insert the headrail at an angle (as shown in the following pictures) and hook the front of the headrail to the bracket. Step (2): Rotate and push the headrail upward, then release after snapping into place.

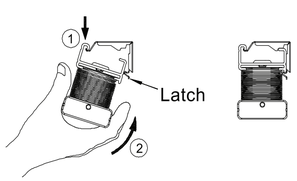

- Double check all brackets are snapped into place before operating the shade.
- Fully raise the shade if you want to remove. Remove the shade by pushing the latch back. Release the shade by rotating the headrail towards you and lifting upward to unhook the rail from the bracket. See steps 1 to 4.

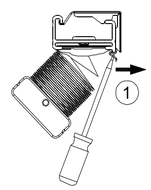

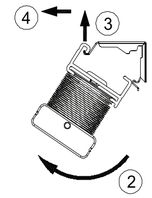

Step 3. Operate the Shade

- Disengage the cord lock by pulling the cord towards the center of the fabric to lower and raise the shade.
- Engage the cord lock by moving the cord away from the center of the shade to lock in desired position.

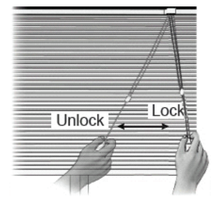

Step 4. Install Hold Down Bracket and Cord Cleat

Hold Down Brackets: Check both brackets are level. Lower the shade and make sure the pins on the brackets are aligned with the holes on the bottom rail end caps.

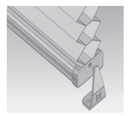

Inside Mount

Outside Mount

Cord Cleat: Install the cord cleat to secure cords out of reach of children. Wrap excess cord around the cleat every time the shade is raised/lowered.

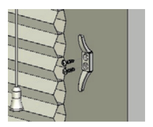

Step 5. Safety Warning

Warning! Children can be strangled in window shade cords. Keep all cords out of children's reach. Move cribs and other furniture away from window coverings with cords. The following devices are recommended:

- Cord Cleat
- Clip/Clamp
- Tie the cord to itself
- Use any tie-down device

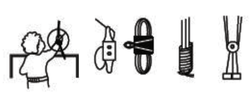

Safety Cord Consolidator

This device breaks apart when minimal pressure is exerted onto the cords. It acts as a safety feature to break the loop(s) above the cord consolidator, which may cause harm to young children.

For Shades with Two (2) Cords:

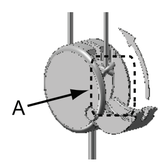

For Shades with Three (3) or Four (4) Cords:

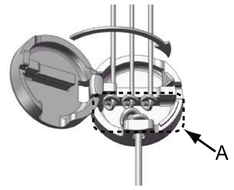

To assemble, place the knot of each pull cord into the area 'A' as shown, and snap the cover back into place. Each cord needs to have its own individual knot. Do not tie cords together.

Step 6. Cleaning the Shade

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a duster, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the headrail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

Step 7. Q & A

Q: My shade will not snap into the mounting brackets, what do I do?
A: Check that the mounting brackets are aligned.

Q: My shade will not raise and lower evenly, what do I do?
A: Check that the cords are not stuck or tangled

Q: The shade will not raise
A: If hold down brackets are being used, check that they have been released.

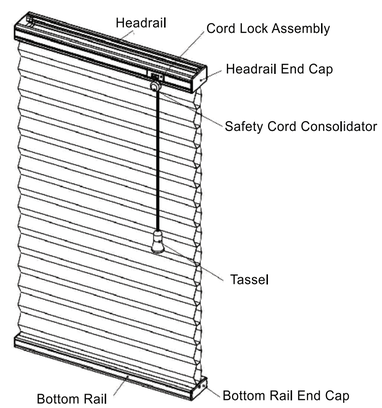

Made in China
65101-10212-A